

Upgrading you Base Plate

1. Remove Impeller cover
2. Turn robot upside down
3. Remove base plate & Filter bag
4. Remove Plastic net covering motor box.
5. Remove one side cover.
6. Remove bolt holding existing base plate, locking clip.
7. Remove and discard locking clip (keep bolt and nut)
8. Locate the two remoulded indented circles (See fig 1) on the lip of Robot body opposite locking clip that was removed.

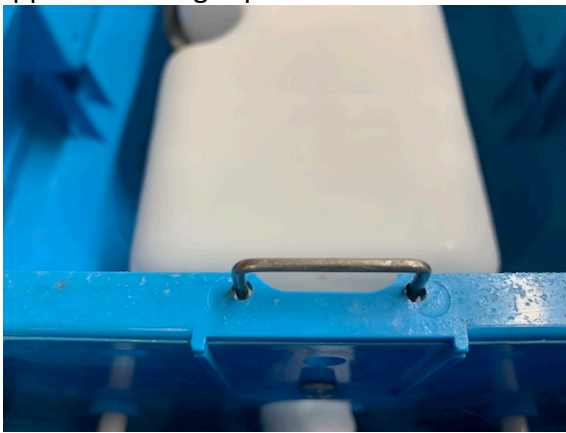


Fig 1

9. Drill a 3ml hole on the inside of the circle at 2 O'clock and 10 O'clock
10. Insert the wire retaining bracket into the holes (see fig 2.)



Fig 2

11. Attach the plastic retaining clip to the feet on the wire retaining bracket.
12. Use the existing locking clip bolt & nut to secure the wire retaining bracket.
13. Repeat steps 5-12 on other side.